




ColostroMAT - Quick Start Guide

**FÖRSTER
TECHNIK®**
Automatisch besser.


1 Connect water and drain

Optional warm water

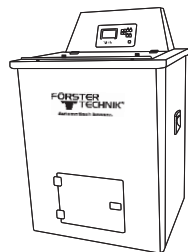


2 Connect device


3 Switch on

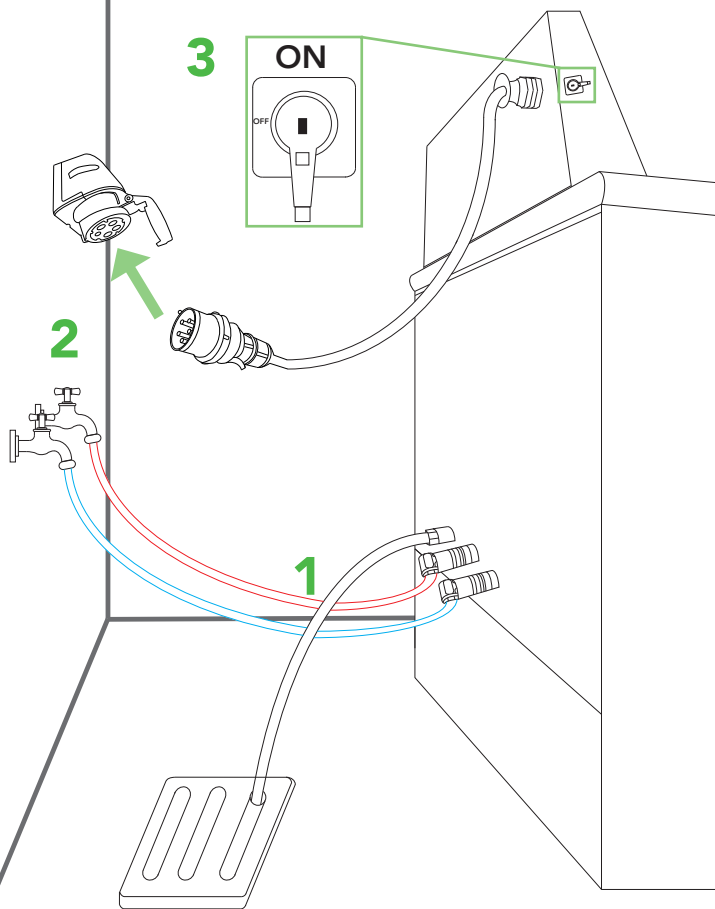

4 Set water connection

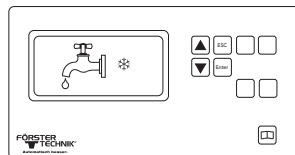


Cold water connection

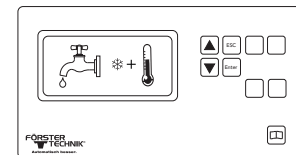


or Cold and warm water connection

5 Set time

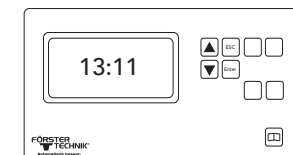



6 Start program

Profile 1 - pasteurize and administer

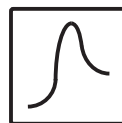


or

Profile 2 - pasteurize and freeze

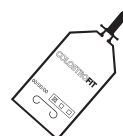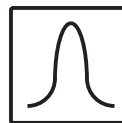

or

Profile 3 - thaw and administer

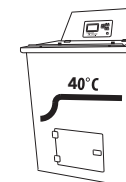

This checklist is based on the basic equipment of the ColostroMAT. Potential extensions aren't listed separately.
For detailed information and valid warnings as well as safety instructions refer to the instructions manual.